


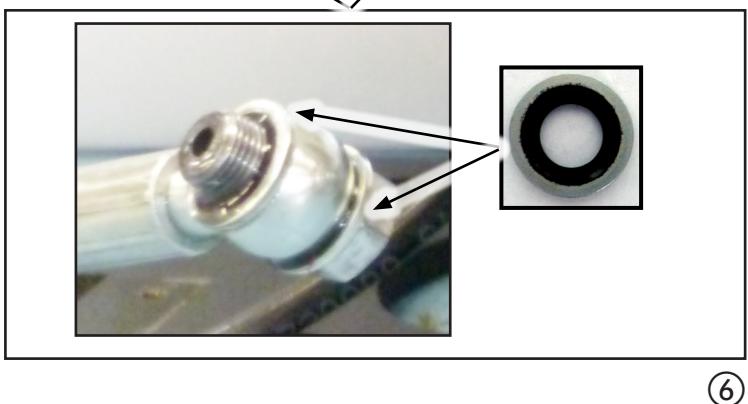
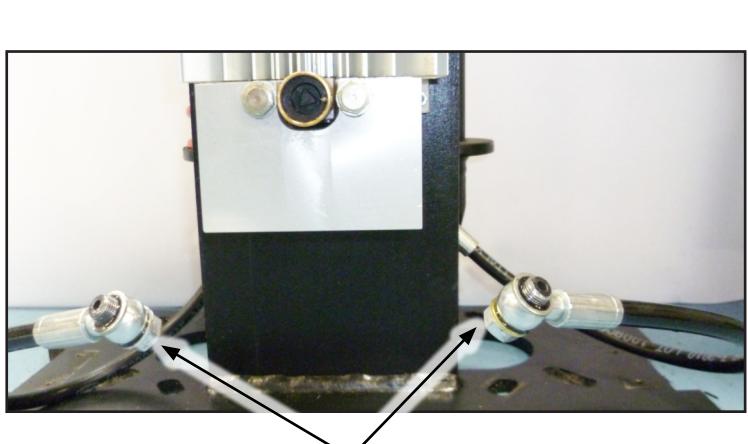
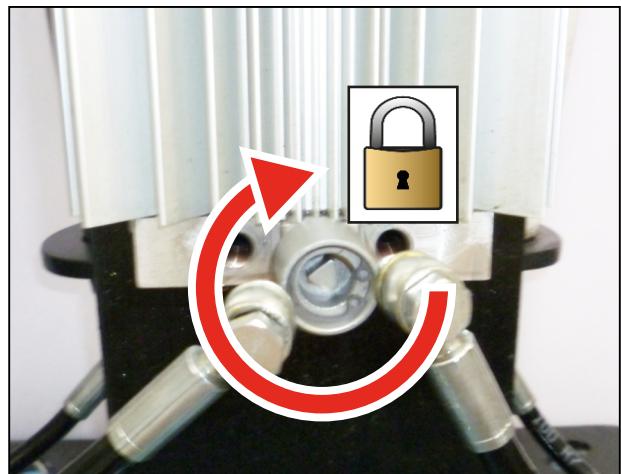
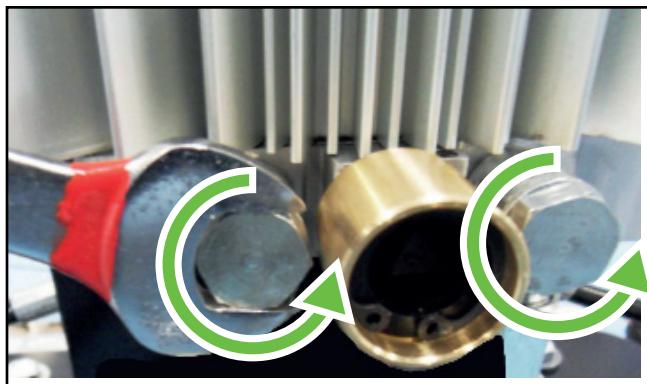
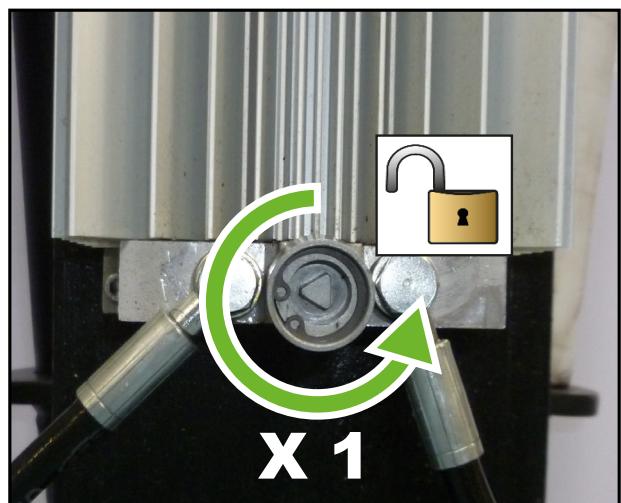


## B680H

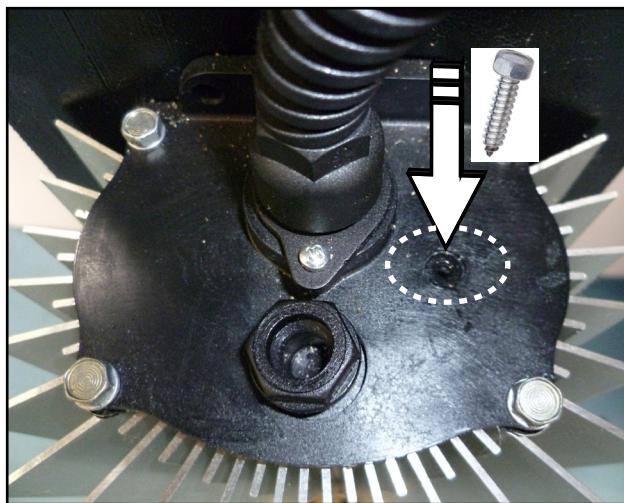

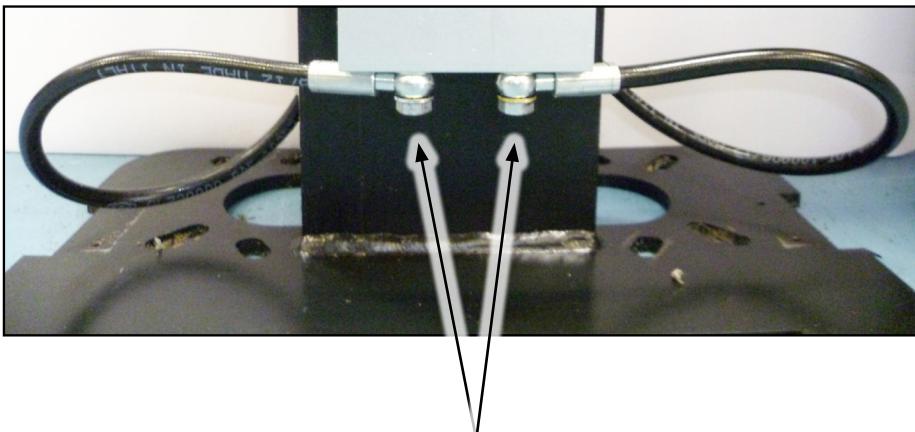

⑦

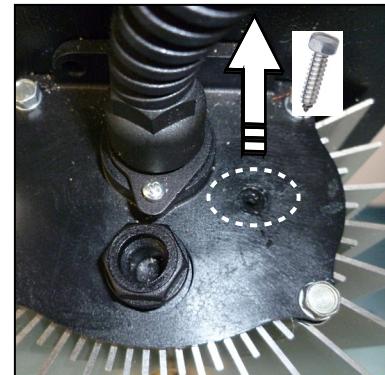

⑧

IT - Regolazione resistenza alla forzatura in apertura.  
 EN - Adjusting the resistor to forcing when opening.

FR - Réglage de la résistance au forçage en ouverture.  
 DE - Einstellung des Widerstands gegen Aufbrechen während der Öffnung.

ES - Regulación de la resistencia al forzamiento en apertura.

NL - Afstellen van de weerstand bij forcing opengaande beweging.




RU - Регулирование функции антивзлом.

PL - Regulacja oporu przy forsowaniu otwierania.


- حتفلا دن ع فدل ا قوقل فمواقم لاید عت AR

Z H - 调整阻力以强制打开

PT - Regulagem da resistência à abertura forçada.

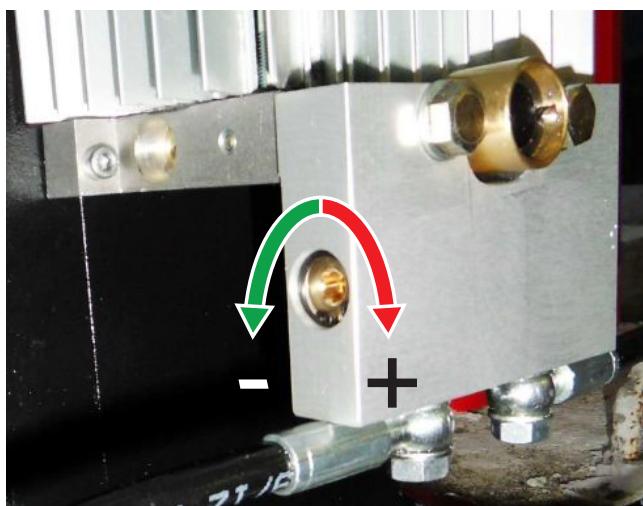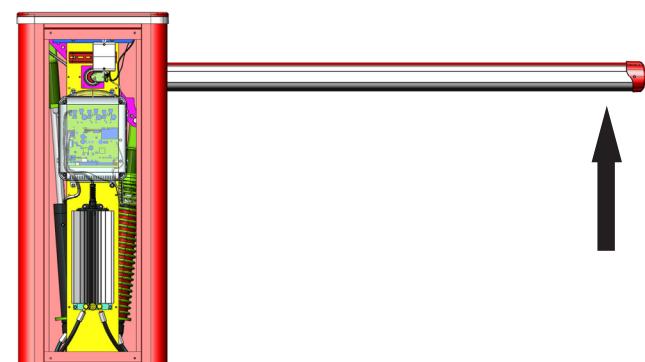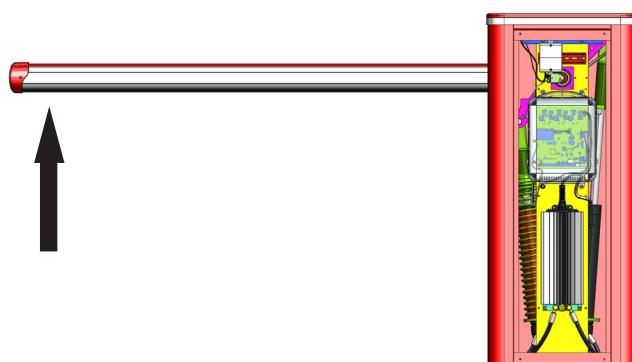

⑨ A

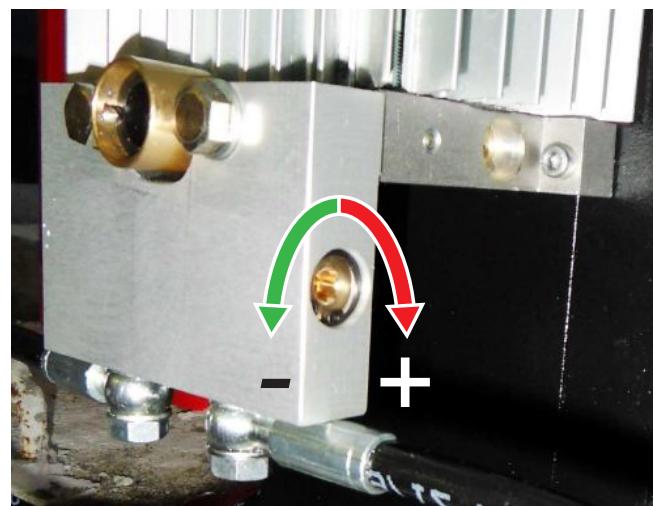

⑨ B